


CERBERUS MANUAL

The light is locked for shipment, refer to OPERATION instruction to unlock. Read this manual carefully before using and keep for future reference. Visit www.moon-sport.com for manual updates. The specifications and design are subject to change without notice.

CONTENTS

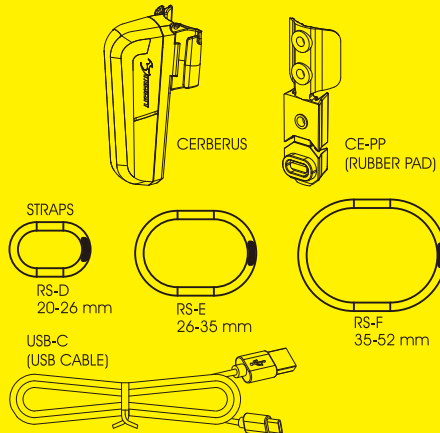

OPERATION



ON / OFF : Press 1s

MODE SELECT : Click

STEADY / FLASH : Double Click

LOCK/UNLOCK : 1. Power off

2. Press 8s: Locked




Unlocked

* Lock system: Lock the light to prevent accidentally turned on.

* Mode memory: The light resumes previous mode upon next usage.

VARIABLE LUMEN SYSTEM

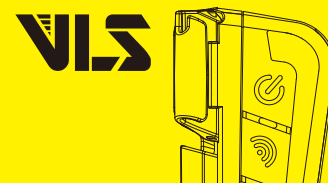

1. Select desired mode.
2. Press and hold to set lumen.
3. Release when reaching desired lumen.

* Light flashes twice when reaching the MAX or MIN lumen level.



* Restore default mode: Press +




RUNTIME


	ANSI FL1	MODE1	MODE2	FLASH	STEADY FLASH	DAY FLASH
DEFAULT LUMEN		25	50	25	25	150
H:MIN		3:30	1:45	20:15	13:45	19:00
VLS LUMEN		50-5	50-5	100-10	100-10	150-10
H:MIN		1:45-18:15	1:45-18:15	5:00-44:15	6:15-17:15	19:00-140:00

MOUNTING

RUBBER PAD INSTALLATION


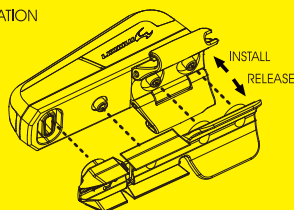


SEATPOST MOUNTING

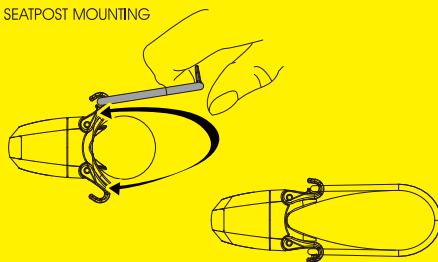

CHARGING

INDICATOR

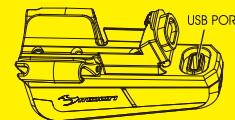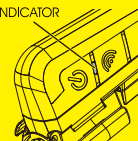

CHARGING

1. Power off
2. Plug USB cable to USB port
3. Unplug after fully charged

* Do not charge over 5V.

* Keep away from flammable objects while charging.

INDICATOR



WARNING

Understand country lighting laws and regulations before use. Do not shine light directly into eyes. Do not mount near wireless computer. Do not blind the oncoming vehicles. Always adjust the angle downward. Do not submerge the light into water. Keep light in cool and dry place when storing. Fully recharge the light at least every 3 months during storage.

WARRANTY

MOON Lights are covered by a **2-year LIMITED WARRANTY**, while MOON batteries are covered by a **180-day** warranty, both starting from the date of purchase.

This warranty covers defects or malfunctions arising from manufacturing or design flaws in the product. It does not cover normal wear and tear, non-rechargeable batteries, and damage caused by improper installation, misuse, mishandling, accidental loss, abuse, accidents, or negligence.

MOON may require the return of any product submitted for warranty consideration. Customers should contact their authorized local dealer or authorized regional distributor for warranty service.

For more information, please contact cs@moon-sport.com.
ONLINE WARRANTY REGISTRATION
Please visit www.moon-sport.com for online warranty registration.

AUTO SAFE MODE



To preserve battery when power is low, the light will enter safe mode with less light output for extra 45mins. Safe mode cannot be override. Recharge battery for maximum performance.